




# Disassembling Nintendo DSi Bottom case

Written By: rjcamero

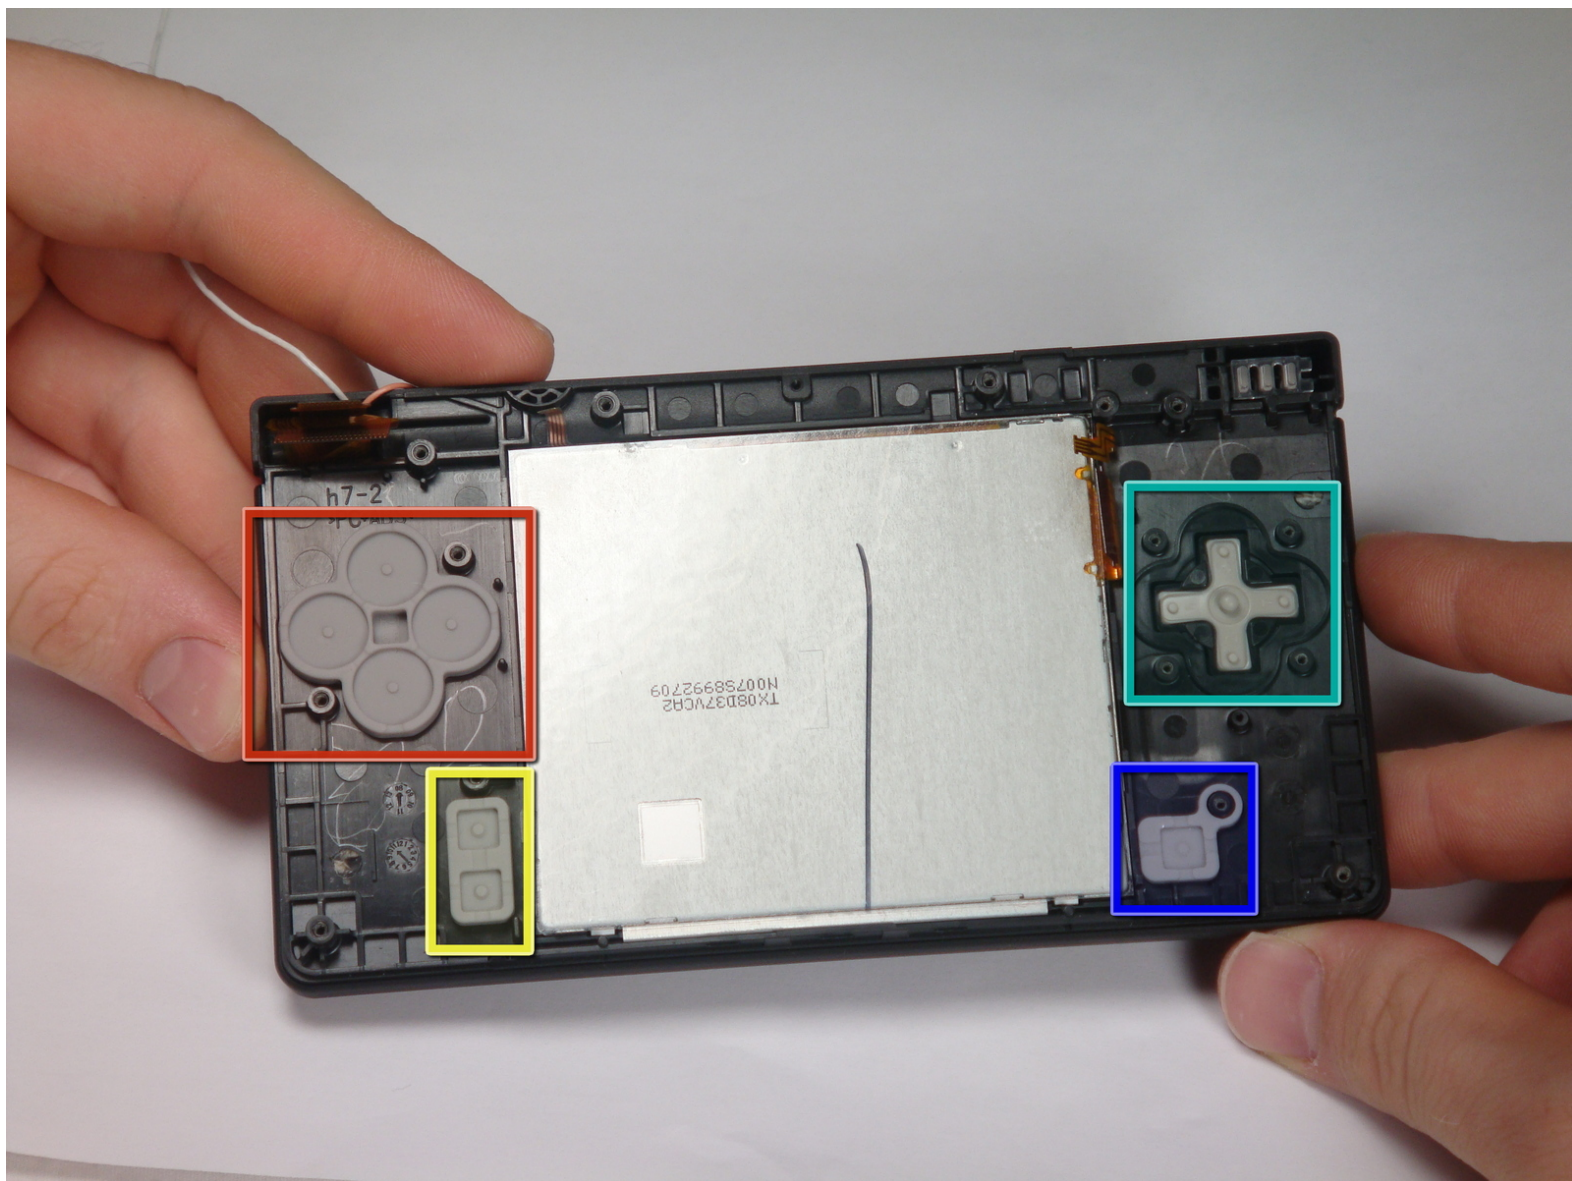

## INTRODUCTION

**This guide has been updated by iFixit staff! Read the new, official guide [here](#).**

A guide on how to disassemble the bottom case assembly, including removing the LCD and buttons.



### TOOLS:

- [Metal Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)



### PARTS:

- [Nintendo DSi Touchscreen](#) (1)

## Step 1 — Battery



- Loosen the two screws on the battery panel. Then lift the panel up to remove it.



## Step 2



- L Button.
- Top of the battery pack.
- To remove the battery pack, place your fingernail or a spudger at the top of the battery near the L button. Gently lift the battery out.




## Step 3 — Motherboard

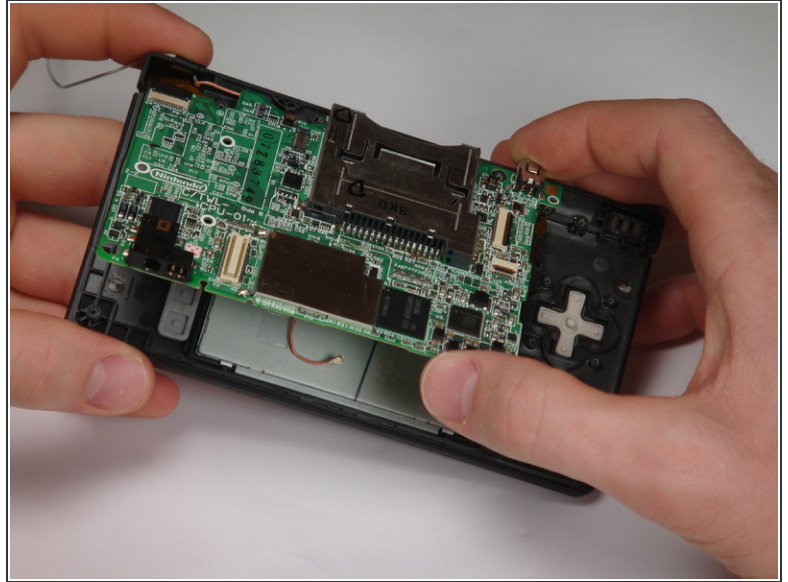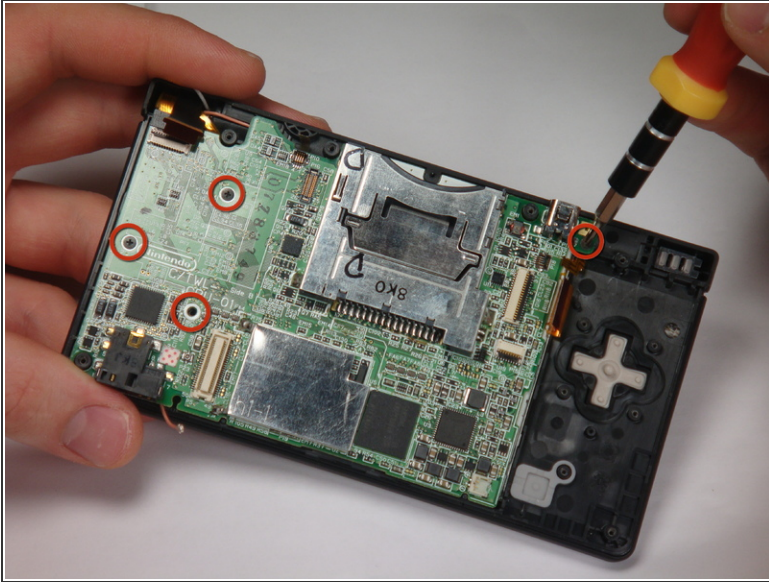


- Remove 4 Phillips screws from the board.
  - Lift the main board from the bottom end and flip it over to reveal the last connector.
- ⚠ Keep the main board fairly close to the case, making sure not to damage the last ribbon cable holding it in place.

## Step 4

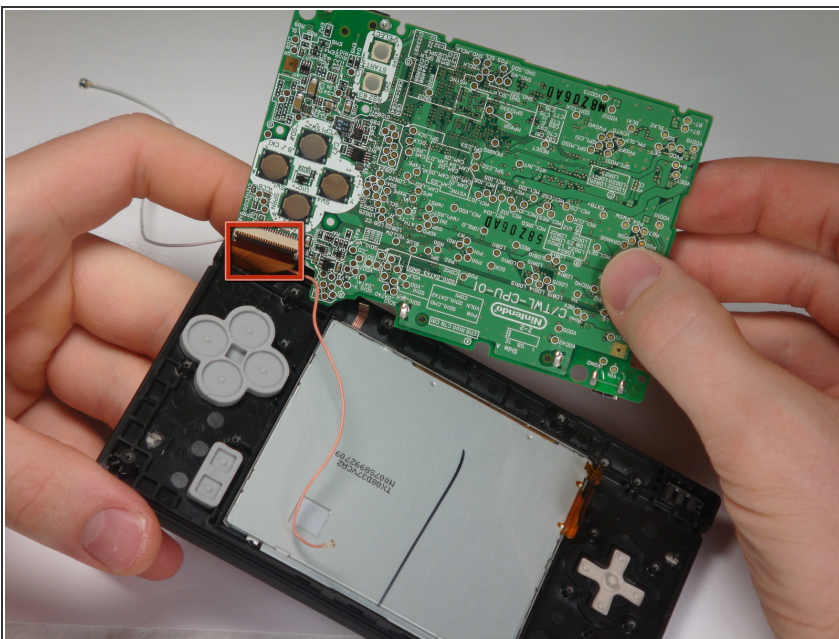

- Disconnect the ribbon cable by gently using a plastic opening tool to flip up the black connector latch. The cable should easily slide out from the connector.
- The motherboard should now be free from the rest of the device.



## Step 5 — Disassembling Nintendo DSi Bottom case

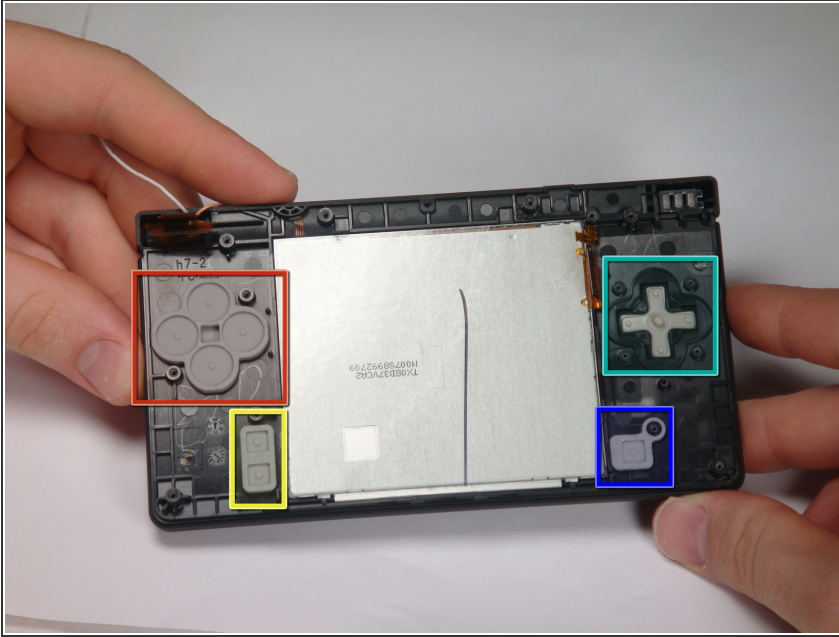

★ Remove the rubber front-panel button membranes from the device. Pay careful attention to where the buttons go, so you can replace them correctly.

- A/B/X/Y button assembly
- Select/Start button assembly
- D-pad
- Power button

## Step 6

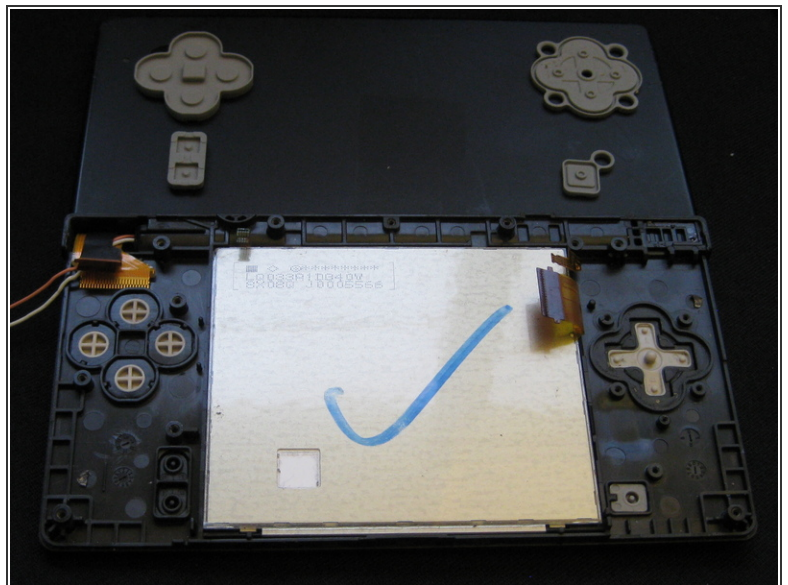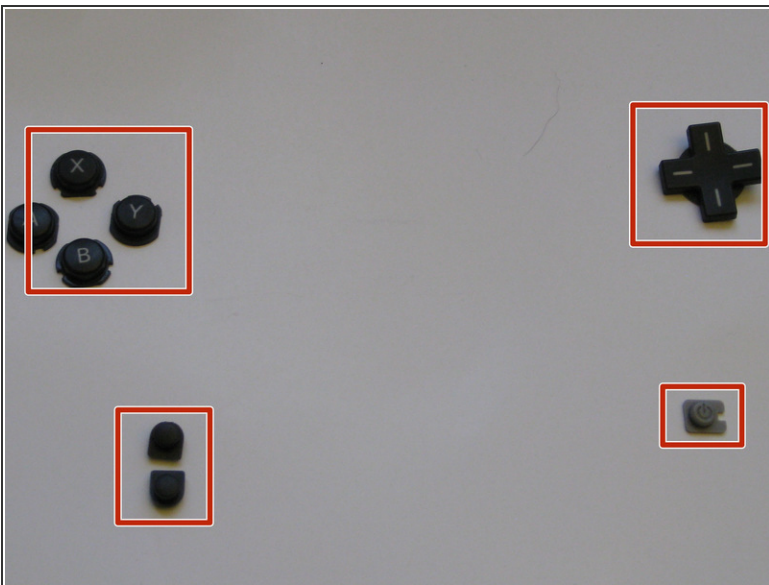


- Remove the plastic buttons and keep them in a safe place.

★ All of the buttons have "key" notches to prevent them from being inserted incorrectly (backwards or in the wrong place), but it can take a while to figure out where everything goes if they get shuffled around.



## Step 7

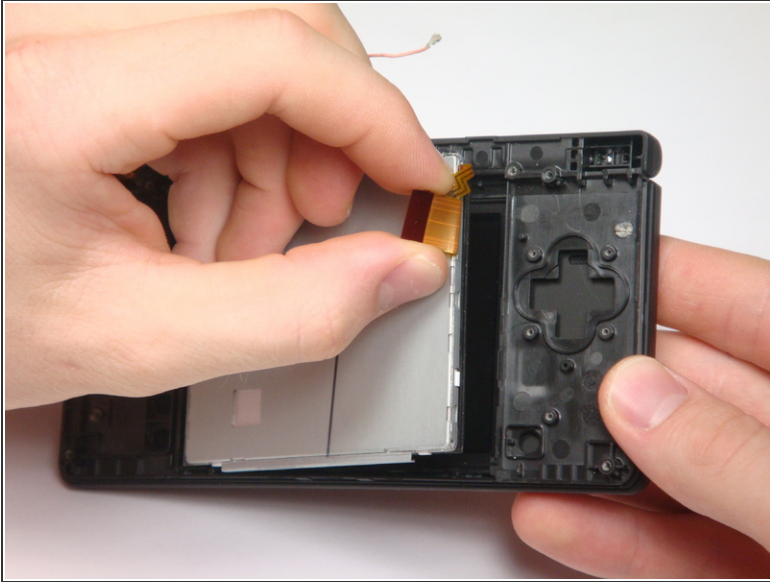

- Flip the case open, and push the lower screen assembly out of the frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-09 01:49:33 PM.